

Lock Adjustment

Before installation:

1. Remove Locking Plate with red rubber material to unlock the unit and mount it on the boat.
2. Once the unit is mounted on the boat. Replace the red rubber locking plate. Make sure the red rubber is facing the transom and the metal side engages the adjustable locking arm.

After Installation:

Adjusting the lock.

1. Once the lift and platform are installed the locks need to be adjusted.
2. To adjust the lock, use a large pair of “Channel Lock” pliers. They will contact the round adjustment “stud” that is threaded on to the lock.
3. The round adjustment stud will press the red rubber against the back of the mount. **The stud should be adjusted 1/8 –1/4 of a turn** after the rubber locking plate is snug and cannot be removed by hand.

Test the lock:

1. To verify that the adjustment has been done correctly. Run the lift up and down several times. Then check the adjustment of the red rubber locking plate. The red rubber locking plate should be snug.