

Oil Change for TNT Lifts

USE MOBIL DTE_24 OIL ONLY
Available from TNT or W.W. Grainger

- Step 1: Put lift in the down position**
- Step 2: Remove hoses from the "A" side of the pump. Put the hose ends in an empty 2 gal can.**
- Step 3: Raise lift. (The platform will NOT move, as the oil will be going into the bucket)**
- Step 4: Replace hoses and fill reservoir. Run the lift up and down.**
- Step 5: Repeat steps 1 thru 4.**
- Step 6: Check oil level with the lift in the up position. Oil change is complete.**